Fis. 1

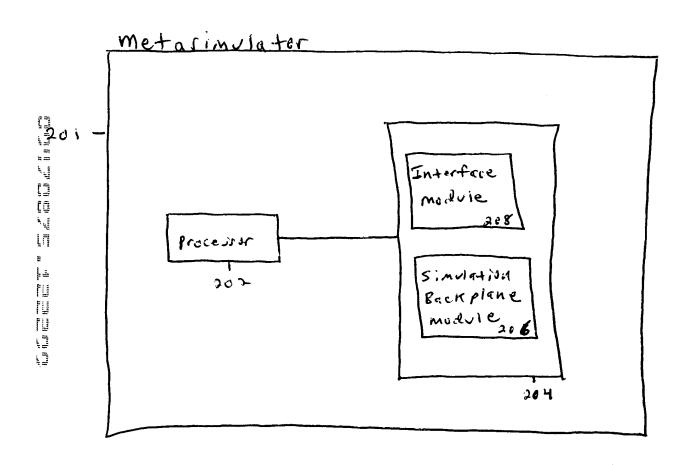


Fig. 2

ij

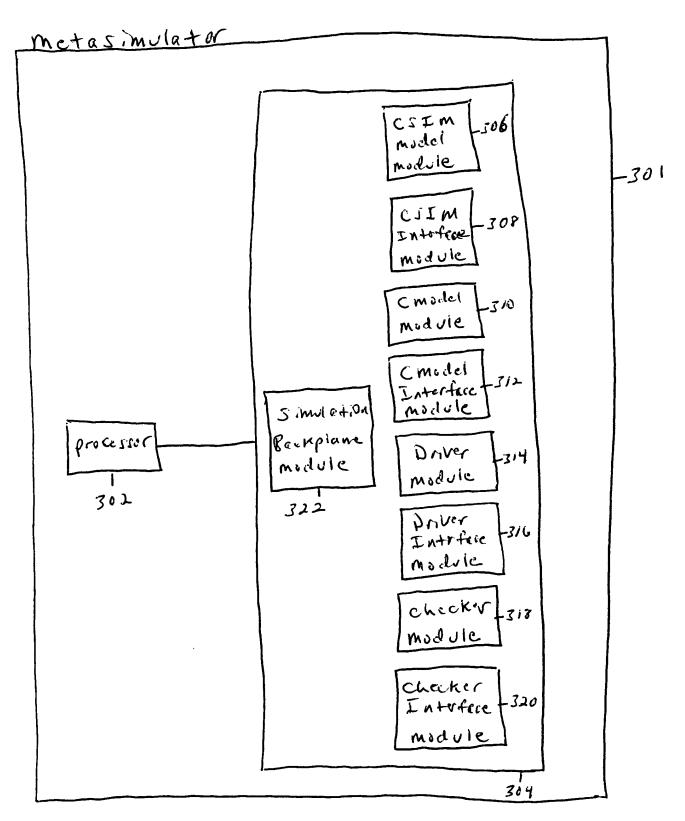


Fig. 3

receive a test 407 merrage from a Sackpiane convert the test message from the sechpiene data 404 format to a data format suitable for a particular simulator Send the converted 406 response messege to the simulator receive a response 40 3 meisige from the rimulator convert the response .410 meirose to backplane data format send the converted - 412 response messoic to the scalepiane

Fis. 4